

- Pay attention to shocks and falls to avoid damaging the product.
- Please do not leave the camera near objects with strong magnetic fields and radio waves.
- Interference may cause product malfunction.
- Please don't leave the camera in places with high temperatures and/or expose to direct sunlight.
- Please leave the product in shady, dry and isolated places.
- Please don't leave the Micro SD near of electromagnetic sources to avoid losing data on the memory card.
- If the product emits smoke, a particular smell or overheats during the charging process, immediately disconnect the power supply.
- Never overload the batteries.
- Do not leave the batteries unattended during charging.
- Keep out of reach of children during the charging phase.

SAFETY RULES

This action camera is not a toy and is not suitable for children under 14 years.

Product compliant directive :
2014/30/EU; 2014/53/EU; 2014/35/EU;
2011/65/EU



www.aaamaze.com
info@aaamaze.com



INSTRUCTION MANUAL

www.aaamaze.com
info@aaamaze.com

© 2018 AAAMaze is a registered trademark.
Produced and imported by X-Joy Srl.
Via Sempione 17
21011 Casorate Sempione (VA) - Italy

INTRODUCTION

Congratulations on your purchase
AAAMAZE ACTION CAMERA!

Easy to use and small. You can use your camera in a variety of situations to record videos and take high-definition photos.

This manual describes how to best use your
AAAMAZE ACTION CAMERA.

Read the manual carefully before use

TECHNICAL SPECS

- DSP: ALL WINNER V3
- Sensor: SONY 179
- Objective: 170° wide angle, 6G lens
- LCD: 2" in HD + 0,66" NT LCD / Dual Screen
- Video resolution: 4K @ 30fps - 2.7K @ 30fps
1080p @ 60/30fps
720p @ 120/60/30fps
- Video format: MP4 H.264
- Photo resolution: 16M / 12M / 8M / 5M / 2M
- Battery: 900 mAh
- APP compatible with iOS e Android
- Waterproof: up to 30m
- USB Interface: Micro HDMI
- External memory: Micro SD, class 10, ~ 64GB

SPECS

- Waterproof case, resistant up to 30m
- HD Photos - 16MP
- MAX resolution for 30fps 4K video
- 170° wide-angle camera
- 2" display
- Photos and videos
- Removable battery
- Video recording during charging
- Stand-by mode
- HD out - high definition output
- Expandable memory, micro SD card
- Multiple shooting modes
- Multiple registration modes
- Charging via USB cable
- Wi-Fi for connection to a dedicated APP
- Accessories included in the package

PRODUCT STRUCTURE



A) BATTERY CHARGING

Remove the cam from the protective cover and charge the battery by connecting the supplied cable to a USB port or a power outlet (adapter not included). The charging phase is indicated by a flashing red light. When fully charged, the red light will remain fixed. To remove the battery, open the slot at the bottom of the cam. NOTE: Check the correct direction before inserting the battery. Charging time: about 2 hours.

B) MICRO SD CARD

Insert the micro SD card (not supplied) into the slot, taking care to insert the memory card in the correct direction. Push the memory card until you hear the 'click' that determines the correct insertion. To remove, press the memory card and slide it out of the slot. NOTE: Insert the memory card only with the Action Cam turned off. AAAMAZE CAM supports a microSD memory card, class 10 with a maximum capacity of 64GB.

G) PHOTO MODE

To take a picture, check that the camera is in Photo Mode. If the photo mode icon does not appear on the screen, press the **Mode/Power** button until it appears. To take a picture:



Press the OK button, the camera will emit a shutter sound to indicate that the picture has been taken.

Photo resolution:

- Standard - 16M/12M/8M/5M/2M
- Timer - Off, 3, 5, 10, 15, 20 seconds
- Auto - Off, 3, 10, 15, 20, 30 seconds
- Multi-shot - Off/3P/S, 5P/S, 10 P/S

H) PLAYBACK MODE

To access the Playback mode, first press the Mode/Power button. Use the Up/Down buttons to scroll through photos and videos. To play a video, press OK button. To delete a file directly from the camera, in Playback Mode press and hold the OK button for 3 seconds and then confirm.

C) POWER ON

To activate the camera press and hold the power button for 3 seconds, the blue light will remain fixed. To turn off the camera, press and hold the Power off button for 3 seconds.

D) AAAMAZE CAM APP

Through the Wi-Fi connection, AAAMAZE CAM App allows you to control the camera using a smartphone. Before using AAAMAZE ACTION CAM it is necessary to:

- Download the AAAMAZE CAM App available on the App Store and Google Play.
- Press the power button and check that the camera is in photo or video mode.
- Press the Up button to activate Wi-Fi, the Led on the top of the cam flashes yellow indicating the active connection.
- Wi-Fi and password will appear on the display.
- Select the network on your device and enter the password.
- Now you will be able to record videos, take photos, view photos/videos and change settings

You can use a memory card reader to view photos and videos directly on your PC.

I) CABLE CONNECTION

By connecting AAAMAZE ACTION CAM via **USB** cable to your camera there are three different modes (Playback/PC Camera/Recharge):

- **PLAYBACK:** select the mode to view saved photos and videos.
- **PC CAMERA:** select the mode to use the camera connected to the PC
- **CHARGING:** select the mode to recharge the battery.

You can connect the camera via an **HDMI** cable by connecting the cable to the corresponding port on the side of the camera.

L) LED INFO

Blue LED: if fixed the cam is on, if flashing it is recording video. **Yellow** LED: if fixed Wi-Fi connected, if off Wi-Fi disconnected, if flashing in connection. **Red** LED: if fixed fully charged, if flashing indicates charging in progress.

directly from the app.

Compatibility:

The App is compatible with the following smartphones:

- Apple - iOS 7 or higher
- Android - version 4.1 or higher

The range varies from device to device. Some features may not work properly on some devices.

E) MODE


Turn the camera on and use the Mode/Power button to switch between Video/Photo/Playback/Settings. Attention: when switching on, AAAMAZE ACTION CAM will always be in Video mode.

F) VIDEO MODE

To record a video check that the camera is in Video Mode. If the camera icon is not on the display, press the Mode/Power button repeatedly until it appears. To record a video: Press the OK button, the blue LED flashes and the recording time appears on the display. To end the recording, press the OK button again.

M) TECHNICAL SPECS

LCD	2.0\TPS
Objective	170° wide-angle
Language	en, zh, ko, ru, fr, de, it, es, ja, pt
Video resolution	Check F
Video format	MP4
Compression video format	H.264
Photo resolution	Check G
Memory card	Micro SD
Photo mode	Check G
Video mode	Check F
Slow photography	1080P/60fps, 720P/120fps
Frequency	Auto, 50Hz, 60Hz
USB	USB 2.0
Adapter	5V/1A
Battery capacity	900 mAh
Video rec. capacity	1080P/ about 90 mins.
Charge time	About 2 h
Dimension	59*41*29 mm
Weight	44g-58g (with battery)
Use temperature	-10°C ~+55°C

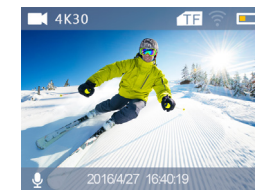

To exclude audio when recording video press down button on the side of the camera.

When the function is deactivated, the icon on the display will be crossed. To reactivate the microphone, press the down arrow.

Video resolution:

- Standard - 4K and 2.7k @ 30fps, 1080P @ 60 / 30fps, 720P @ 120/60 / 30fps
- Time-Lapse video - Off, 0.5 seconds, 1 second, 2 seconds, 5 seconds, 10 seconds, 30 seconds, 60 seconds
- Recording loop - Off, 2 mins, 3 mins, 5 mins.
- Slow motion - 1080P @ 60fps, 720P @ 120fp

N) PRECAUTIONS

- Do not disassemble the protective case, in order not to damage the waterproofing of the case.
- Do not keep the product at excessively high temperatures for long periods.
- Do not expose to direct sunlight.
- Keep away from heat sources.
- Never overcharge the batteries.
- In case of non-use it is advisable to remove the battery and recharge it every month to keep it in good condition.
- Before each use check carefully the status of the cam and accessories.
- After use in salt water wash the protective case carefully.

O) SAFETY

Do not open, modify or tamper with any part of the product. If the product does not work properly, please contact the service department.