




MAZE DOTS TRUE WIRELESS EARPHONES

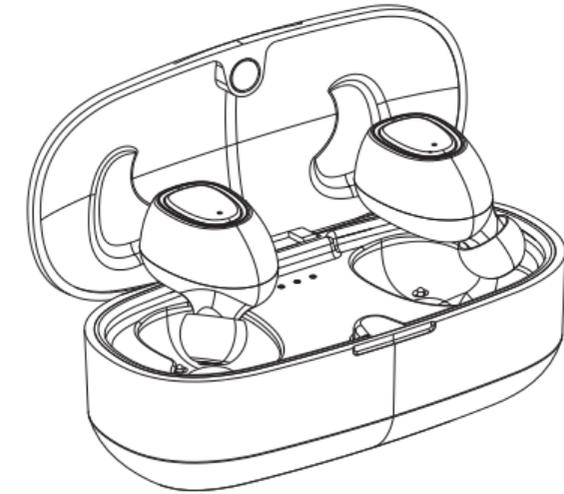

INSTRUCTIONS

WARNING:

Read all instructions and warnings before using this product. Improper use of this product may cause damage, overheating, toxic fumes, fire or explosion, for which damage the Buyer is responsible and not the Manufacturer.

- Do not expose the Earphones to rain, moisture, any liquid product, or mould.
- Do not immerse in any liquid.
- Do not expose to dust, direct sunlight, strong heat, or any mechanical force.
- The use of detergents and/or solvents can damage the product irreversibly.
- This product is not a toy. Keep it out of the reach of children and pets. Small components may cause suffocation or other injuries.
- Do not leave the packaging material unattended. It could become a dangerous plaything for children.
- If the product is damaged, do not use it. Consult an authorised service centre.
- To extend the service life of the battery, you are advised to charge the earphone at least once a month.
- Please use the charger provided by the company to charge the earphone. Use of other low-quality chargers may cause dangers.
- Adjust the volume to an appropriate degree when using the earphone.
- DO NOT wear the earphone when sleeping; the earphone may be damaged or cause injuries to you.
- When driving you are advised to use the Bluetooth earphone to ensure your driving safety.

OPERATING INSTRUCTIONS:

SET UP AND PAIRING

1. Remove the earphones from the case. Turning on a blue LED on each headset confirms activation.
2. If both earphones are removed from the case, it is necessary wait for an acoustic signal to confirm the correct one synchronization between them. Before connecting a red and blue LEDs flashes on the left earphone and a blue LED flashes on the right earpiece.
3. Access the device's Bluetooth settings and select "**MAZE DOTS**" to connect the earphones to the device. A blue LED flashes on both headsets to indicate the correct connection.

AUTO-POWERING

The earphones activate automatically as soon as they are taken out of their case. The blue and red LEDs indicate the correct ignition.
NOTE: In the event that the case does not have a charge level you need to activate the earphones manually.

MANUAL POWERING

Press and hold the button for 3 seconds on each earphone to turn on. The blue LED and the message "Power on" confirm the procedure.

AUTOMATIC SHUTDOWN

Place the earphones in their case. They switch off automatically and if necessary enter in charging mode. This mode is indicated by the red flashing LED on each individual headset.

MANUAL SHUTDOWN

Press and hold the button for 3 seconds on each headset to proceed to shutdown. The blue LED flash and the message "Power off" confirm the operation.

AUDIO PLAY/PAUSE

Quickly press on the left or right earpiece to set paused or play the music again.

REW/FF

Press the button on the left earphone twice to proceed listening the next audio track or press the key twice right earpiece button to select the previous one.

ACCEPT A PHONE CALL

During an incoming call, you can answer via headset; you need to press the headset button independently whether right or left.

STOP A PHONE CALL

To stop the call press the button on the headset, right or left.

REFUSE A PHONE CALL

You can reject an incoming call by pressing twice one of the headset.

CANCEL A PHONE CALL

During the selection status, briefly press the button for cancel a call.

SIRI/ASSISTANT GOOGLE ACTIVATION

Press and hold the button on the headset for 1 second, simultaneously on the smartphone the voice assistant is activated.

LOW BATTERY LEVEL

When the charge level of the earphones is less than 20% the LEDs on the product flash red and a "low battery" message indicates battery power low. Proceed to play the earphones in its own case to recharge.

AUTOMATIC CONNECTION

Following the initial and correct setting, whenever earphones are extracted from the case automatically proceed to activation and association with the registered device. Make sure the device is within range of the signal and that the Bluetooth connection is active.

RESTORING INITIAL SETTINGS

To restore to the initial settings is necessary, with the earphones turned off, press and hold both buttons for about 10 seconds. Turning on the red and blue LEDs on both headphones confirms the successful restoration. It will now be possible to proceed back to the configuration.

CHARGING

Position the earphones correctly inside the case for starting the charging phase. The LED on each headset flashes red during the recharge phase. When fully charged the LED is off.

STORAGE CASE CHARGE LEVEL

The charge level of the earphone holder is indicated by four LEDs and is specified as follows:

- "●●●●" 100% Power
- "●●●" 75% Power
- "●●" 50% Power
- "●" 25% Power

A full charge level of the case recharges approximately the earphones up to three times.

TECHNICAL SPECIFICATIONS

Bluetooth Version	V5.0
Bluetooth Range	10-15M
Earphone Bluetooth	50mAh x2
Case Battery	400mAh
Charging Time	About 1.5 hour
Play Time	About 5 hours
Talk Time	About 5 hours
Standby	200 hours



AMMT0017
MADE IN P.R.C

MAZE