



X1

4K | ACTION CAM



INSTRUCTION MANUAL

www.aamaze.com
info@aamaze.com


SAFETY RULES

- Pay attention to shocks and falls to avoid damaging the product.
- Please do not leave the camera near objects with strong magnetic fields and radio waves. Interference may cause product malfunction.
- Please do not leave the camera in places with high temperatures and/or expose to direct sunlight.
- Please leave the product in shady and dry places.
- Please do not leave the Micro SD near of electromagnetic sources to avoid losing data on the memory card.
- If the product emits smoke, a particular smell or overheats during the charging process, immediately disconnect the power supply.
- Never overload the batteries.
- Do not leave the batteries unattended during charging.
- Keep out of reach of children during the charging phase.

FEATURES

- **DSP:** All winner V5
- **Sensor:** Sony IMX386
- **Lens:** 170°, 7G+IR lens
- **LCD:** 2.45" HD Screen - Touch screen
- **Video Resolution:** 4K@60/30 fps - 3.2K40fps - 2.7K@30fps - 1080P@120/60/30 fps - 720P @ 240/120/60/30 fps
- **Image Resolution:** 16M/13M/8M
- **Battery:** 3.7V 1050mAh
- **WiFi:** AAAMaze X1 for iOS and Android
- **Waterproof case,** resistant up to 30mt
- **USB Interface:** Micro HDMI
- **External Memory:** MicroSD Card , class 10, up to 128GB
- Electronic Stabilization
- Remote Control + Accessories included

PRODUCT STRUCTURE

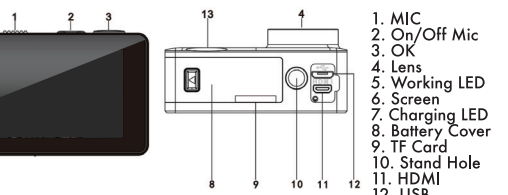

1. MIC
2. On/Off Mic
3. OK
4. Lens
5. Working LED
6. Screen
7. Charging LED
8. Battery Cover
9. TF Card
10. Stand Hole
11. HDMI
12. USB
13. Power/Mode

BATTERY CHARGING

Remove the cam from the protective cover and charge the battery by connecting the supplied cable to a USB port or a power outlet (adapter not included). The charging Status Lights remains ON while the battery is charging. The charging Status Lights will turn OFF when the battery is fully charged. To remove the battery, open the slot at the bottom of the cam. NOTE: Check the correct direction before inserting the battery. Charging time: about 3 hours (in power off charging mode).

POWER ON/POWER OFF

To activate the camera press and hold the power button for 3 seconds, indicator light power ON. To power off, long press the power button for 3 seconds, operation indicator light power OFF.

MICRO SD CARD

This camera is required to use a TF Card (Multimedia Memory Card) Class 10 or higher.

Insert the micro SD card (not supplied) into the slot, taking care to insert the memory card in the correct direction. Push the memory card until you hear the 'click' that determines the correct insertion. To remove, press the memory card and slide it out of the slot.

NOTE: Insert the memory card only with action cam turned off. AAAMAZE CAM supports a microSD memory card, class 10 with a maximum capacity of 128GB.

WARNING:

- Keep it away from any strong magnetic interference objects like a speaker or television receiver.
- Keep it away from overheated or super-cooled environment.
- Keep the TF Card clean and avoid exposing to any liquid.
- In case of touching any liquid, dry it with a soft cloth.
- Place it in the card holder when it is not needed.
- Do not use a TF Card that has been used in other digital video cameras or digital cameras. Please firstly format it before using in your new cam.
- Do not use a TF Card formatted within other digital video cameras or TF Card Readers.
- Do not power off or take out the TF Card when recording, deleting (formatting) or reading.

AAAMAZE CAM APP

Through the Wi-Fi connection, AAAMAZE CAM App allows you to control the camera using a smartphone. Before using AAAMAZE X1 it is necessary to:

- Download the AAAMAZE X1 App available on the App Store and Google Play.
- Press the power button and check that the camera is in photo or video mode.

- Into setting page you can activate the Wi-Fi mode. WiFi info will appear on the screen.
- Open the WiFi connection on your phone and search for the WiFi name "AAAMAZE X1" and connect it.
- Now you will be able to record videos, take photos, view photos and videos and change settings directly from the app.

COMPATIBILITY:

The App is compatible with the following smartphones:

- Apple - iOS 7 or higher
- Android - version 4.1 or higher

The range varies from device to device. Some features may not work properly on some devices.



Available on the App Store

Get it on Google play

Download AAAMAZE X1 APP on your smartphone

VIDEO MODE



1. Video mode
2. Video Working Time
3. Video Remaining Time
4. EIS Open
5. TF Card
6. MIC Open
7. Battery
8. Video resolution

To record Video, verify the camera is in Video mode. To start recording press the red button. The camera icon will become RED and the blue led will start flashing. To stop recording press the red button again. The camera icon will return GREY and the led will stop flashing.

PHOTO MODE



1. Photo mode
2. Photo resolution
3. Photo setting
4. Settings
5. Return to Photo Mode


To capture a photo, verify the camera is in Photo mode. Press the red photo button. The camera will emit a camera shutter sound.

BURST PHOTO

To capture a Burst Photo series, verify the camera is in Burst Photo mode. To take a Burst Photo series press the red photo button. The camera will emit a camera shutter sound.

TIME LAPSE

To capture a Time Lapse series, verify the Continuous Lapse is ON. To take Time Lapse press the Red Photo Button. The camera initiates countdown and emits a camera shutter sound each time a photo is taken. To stop Time Lapse function press again the red button.

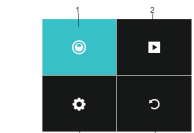

- POP UP MENU.
- To activate long press on the red button.
1. Mode Menu
 2. Playback
 3. Settings
 4. Return

REMOTE CONTROL



⚠ Splashproof only, not waterproof!

TO DOWNLOAD PHOTO/VIDEO

Connect Camera to the PC into the removable disk mode. Photos or videos are stored in the "DCIM\100 MEDIA" directory, you can enter this directory to copy File to your computer. Note: Do not disconnect the USB during the download process. Do not insert or remove the memory card when connecting to prevent data loss.

PRECAUTIONS

- Do not disassemble the protective case, in order not to damage the waterproofing of the case.
- Do not keep the product at excessively high temperatures for long periods.
- Do not expose to direct sunlight or to heat sources.
- Never overcharge the batteries.
- In case of non-use it is advisable to remove the battery and recharge it every month to keep it in good condition.
- Before each use check carefully the status of the cam and accessories.
- After use in salt water wash the protective case carefully.

SAFETY

Do not open, modify or tamper with any part of the product. If the product does not work properly, please contact the customer care.

This action camera is not a toy and is not suitable for children under 14 years.

In accordance with the regulation 2014/53/EU; 2014/30/EU; 2011/65/EU



www.aamaze.com
info@aamaze.com

©2019 AAAMaze is a registered trademark.
Imported and distributed by X-Joy Srl.
Vai Sempione 17 - 21011 - Casorate Sempione (VA) - Italy