



RIPPLE PLUS WIRELESS SPEAKER



INSTRUCTIONS

BACK

WARNINGS:

• Read the instructions for use carefully before using the speaker for the first time. Keep the manual in a safe place for future reference.

• If Ripple Plus is used for a purpose other than that provided, is improperly used or repaired by unqualified personnel, we decline all responsibility in the event of any damage.

• The speaker is not a toy for children. Therefore place it beyond out of the reach of children.

• Do not expose Ripple Plus to dust and very high or low temperatures.

• Do not place the Ripple Plus near heaters or near other sources of heat.

• Do not expose Ripple Plus to direct sunlight.

• Do not place the Ripple Plus near an open fire (for example near a candle).

• Always leave enough space around the speaker.

• Never cover the Ripple Plus during operation.

• Place the speaker on a flat and stable surface.

• Avoid dropping it and do not expose it to strong impact.

• Do not leave the device unattended during the charging time.

• Ripple Plus resists splashing water according to IPX7 certification.

However, never immerse the speaker in water to clean it. Also make sure that the silicone cover that protects the connectors is correctly closed.

• For any operating problems, refer only to a technician qualified.

• Clean the speaker only with a soft, dry cloth.

• In order to avoid harming the product performance, please do charge your device each 3 months at least.

• Domestic use only.

• Batteries should never be thrown in the municipal waste, but should be disposed of separately, by dropping them off at collection points in cities, at authorized stores, or directly at ecological islands.

• Batteries may only be removed by authorized personnel. Do not perform the operation in autonomy.

NOTES BEFORE USE

This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules:

1. Place the speaker in a stable position avoid fall and cause damage or personal injury.

2. Do not drop, disassemble, open, crush, bend, puncture, burn speaker.

4. Please send professional maintenance staff to repair for any reason damage.

5. Before wiping with a dry cloth to clean the speaker, set the power switch to the off position and unplug the power cord from the power outlet.

6. Health considerations, please adjust the sound to a suitable level.

CAUTION! This product contains lithium batteries. Read the warnings carefully before use! Risk of explosion if you try to replace them or charge them incorrectly.

To avoid possible hearing damage, limit listening time at high volumes.

PARTS AND FUNCTIONS:

1. Lanyard

2. + Volume up button: next song, increase the volume

3. - Volume down button: previous song, decrease the volume

4. Bluetooth button: switch the playing mode

5. Pause button: play, pause, answer call, TWS

6. Power button: power on/off, RGB Light Control

7. TF card slot


8. AUX IN port

9. Type-C charging port

10. Microphone

11. Bluetooth indicator

12. Indicator Bluetooth

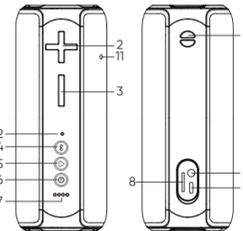

CHARGING

Connect the supplied charging cable to the charge input and to a USB port on your computer or to a USB charger. The LED indicators will light up in turn during charging.

4 LED indicators stay on when fully charged. Use a power supply compatible with the speaker input data. USB power supply not included in the package.

POWER ON/OFF

Power on: Long press power button 3 seconds to power on the speaker, then the Bluetooth indicator light is on and you can connect Bluetooth devices.

Power off: Long press power button 3 seconds to power off the speaker, and then Bluetooth indicator will turn off.

CONNECT THE SPEAKER

Turn on the speaker, the bluetooth indicator flashing white, on your device search for Bluetooth devices.

Select the speaker from the list. It will give an indication sound when the connection is successful. The Bluetooth indicator solid white. Only one Bluetooth device can be connected at the same time. If you want to connect another device to the speaker, then first disconnect the current one.

DISCONNECT THE SPEAKER

When it's connected via Bluetooth, long press Bluetooth button 3 seconds to disconnect.

RECONNECT THE SPEAKER

Some Bluetooth devices support automatic reconnection; with those devices the speaker will automatically reconnect.

The speaker will not automatically reconnect to devices that do not support automatic reconnection. When it's not connected, long press Bluetooth button 3 seconds to connect to the last disconnected device.

PLAYING MODE

Short press the Bluetooth button to switch between different playing mode BT or AUX, TF.

RGB LIGHT

Short press power button to control the RGB light ON and OFF. Play Music: RGB lights flash with the rhythm of the music. Pause: RGB light breathes slowly.

PLAY MUSIC USING MICRO SD CARD

Connect a micro SD card and power on the speaker.

AUDIO CABLE CONNECTION

Power the speaker on. Connect a 3.5 mm audio cable to the speaker and your device. The speaker is now connected to your device.

THE PAUSE BUTTON'S FUNCTIONALITY

Short Press: 1. Music playback status: play, pause function.

2. When there is an incoming call: answer the call

3. When you're receiving the call: hang up the phone call

Long Press: 1. When you're calling: Press 2 seconds to reject the call

2. Press 2 seconds to enter TWS connection, once connected, press 2 seconds to disconnect TWS connection.

3. Long press for 5 seconds to clear the pairing information and return to the default volume with a beep, the speaker will automatically turn off.

Double press: When it's connected via Bluetooth to your phone: to call back the last call.

CHANGE VOLUME AND SONG

When listening to music. Increase volume: Short press on the "+" button

Decrease volume: Short press on the "-" button

Previous song: Long press on the "-" button

Next song: Long press on the "+" button

HANDS-FREE FUNCTIONALITY

1. Turn on the speaker and the bluetooth indicator will flash white

2. Short press the pause button to answer the call on the speaker, you can talk to each other through the microphone hole, after call ended, it will continue to play music.

3. Long press the pause button on the speaker to reject an incoming call.

4. The bluetooth indicator will be solid white, only one bluetooth device can be connected at the same time.

AUTOMATICALLY TURN OFF FUNCTIONALITY

The speaker will automatically turn off in 10 minutes when Bluetooth is not connected and no music is playing.

TECHNICAL PARAMETERS

• Speaker: Ø52mm 40 6Wx2

• Charging time: 3 hours

• Input: 5.0V=1.0A

• Bluetooth version: V5.0

• Built-in rechargeable battery: Li-ion, 3.7V, 2200mAh

• Playing time: 6 hours

• Waterproof level: IPX7

• Range: Up to 10m

• Product Weight: 450g

• Product Size: 77x81x191mm

• Frequency: 2402-2480MHz

• Maximum transmission power: -0.80dBm

PACKAGE INCLUDING

• 1pcs Ripple Plus Wireless Speaker - 1pcs Product manual - 1pcs Type-C USB cable

TWS CONNECTION

1. Turn on both speakers

2. Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound. The default is the primary speaker that you operated the Play/Pause-button of this speaker for pairing initially.

3. Carry out the procedure for both device. Release play/Pause button. It can take a few more seconds before speakers connect to each other.

Check the indicator lights to distinguish L/R channel: The white light on one speaker is flashing white for every 3 seconds that should be the left channel (the primary speaker) the white light on the other speaker is solid white that should be the right channel

4. Go into the Bluetooth menu on your smartphone and pair the speakers with your phone by selecting the speaker model number.

(It will only display 1 number which is both combined in one)

TWS DISCONNECTION

1. Press and hold the play/pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound.

INFORMATION FOR USERS

Pursuant to Legislative Decree N°49 of 14 March 2014 "Implementation of Directive 2012/19/EU on waste electrical and electronic equipment (WEEE)".

The crossed-out bin symbol shown on the equipment indicates that the product at the end of its useful life must be collected separately from other waste. The user must, therefore, deliver the equipment complete with essential components at the end of its life to the appropriate separate collection centers for electronic and electrical waste, or return it to the retailer at the time of purchase of new equipment of an equivalent type, in the ratio of one to one, or 1 to zero for equipment with a longer side of less than 25cm.

Adequate separate collection for the subsequent start-up of the discarded equipment for recycling, treatment and environmentally compatible disposal helps to avoid possible effects negative on the environment and on health and favors the recycling of the materials of which the equipment is made.

Illegal disposal of the product by the user involves the application of administrative sanctions pursuant to Legislative Decree no. Legislative Decree N°49 of 14 March 2014.

The manufacturer (Smart Sales S.r.l.) declares that the type of equipment WIRELESS SPEAKER model AMAT0012 is compliant with directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following Internet address: www.smartsales.it



©2022 AAAMaze® is a registered trademark. Device produced for AAAMaze® by Smart Sales Srl - Via Isorzo 36, 21055 Gorla Minore (VA), Italy. All trademarks belong to their respective owners.

www.aamaze.com - info@aamaze.com



RIPPLE PLUS CASSA WIRELESS



ISTRUZIONI D'USO

FRONT

AVVERTENZE:

• Leggere con cura le istruzioni d'uso prima del primo utilizzo.

• Conservare il manuale per consultazioni future.

• Quando Ripple Plus venga usato per uno scopo diverso da quello previsto, venga inappropriatamente utilizzato o riparato da personale non qualificato, si declina ogni responsabilità nel caso di eventuali danni.

• Lo speaker non è un giocattolo per bambini. Collocatelo dunque al di fuori della loro portata.

• Non esponete Ripple Plus a polvere e a temperature molto alte o basse.

• Non collocate Ripple Plus vicino a caloriferi o ad altre fonti di calore.

• Non esponete Ripple Plus a luce solare diretta, fiamma viva e fonti d'acqua.

• Lasciate sempre spazio attorno allo speaker.

• Non coprite mai Ripple Plus durante il funzionamento.

• Collocate lo speaker su una superficie piana e stabile.

• Evitare di farlo cadere e non esponetelo a forti urti.

• Non lasciare il dispositivo incustodito durante la fase di ricarica.

• Ripple Plus resiste agli spruzzi d'acqua secondo la certificazione IPX7.

• Evitare di farlo cadere e non esponetelo a forti urti.

• Non provate mai a smontare o a riparare in autonomia.

• Per ogni problema di funzionamento, indirizzatevi soltanto ad un tecnico qualificato.

• Le batterie non vanno mai buttate fra i rifiuti urbani, ma vanno smaltite a parte: conferitele nei punti di raccolta presenti nelle città, nei negozi autorizzati o direttamente nelle isole ecologiche.

• Le batterie possono essere rimosse solamente da personale autorizzato. Non effettuare l'operazione in autonomia.

NOTE PRIMA DELL'UTILIZZO

Questo prodotto è stato progettato con la massima attenzione. Per garantire la sicurezza attenersi alle seguenti regole:

1. Posizionare lo speaker in una posizione stabile per evitare cadute e causare danni o lesioni personali.

2. Non far cadere, smontare, aprire, schiacciare, piegare, forare, bruciare lo speaker.

3. Non esporre ad alcuna fonte di calore diretta (radiatori), apparecchiature di riscaldamento, stufe o altre apparecchiature che generano calore).

4. Richiedere al personale di manutenzione qualificata per riparare eventuali danni.

5. Prima di pulire lo speaker con un panno asciutto, impostare l'interruttore di su off e scollegare il cavo di alimentazione dalla presa di corrente.

6. Regolare il suono a un livello adeguato per evitare danni acustici.

Attenzione! Questo prodotto contiene batterie di Litio. Leggere attentamente le avvertenze prima dell'uso! Pericolo di esplosione se si tenta di sostituirle o ricaricarle in maniera non corretta.

Per evitare possibili danni all'udito, limitare il tempo d'ascolto a volumi elevati.

PARTI E FUNZIONI:

1. Passante cordino

2. + Pulsante di aumento del volume: brano successivo, aumento il volume

3. - Pulsante di riduzione del volume: brano precedente, diminuisce il volume

4. Pulsante Bluetooth: attiva la modalità di riproduzione

5. Pulsante pausa: play, pausa, risposta chiamate, TWS

6. Pulsante Power: power on/off, Controllo luce RGB

7. Indicatore livello batteria


8. Slot memory card

9. Porta AUX IN

10. Porta di ricarica Type-C

11. Microfono

12. Indicatore Bluetooth

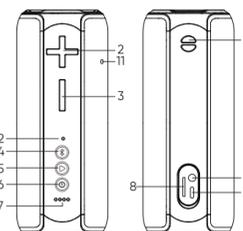

RICARICA

Una batteria ricaricabile integrata alimenta lo speaker. Collega il cavo di ricarica in dotazione all'ingresso di ricarica e a un alimentatore USB. Gli indicatori LED si illuminano durante la ricarica. 4 indicatori LED impongono accessi quando è completamente carica.

Utilizzare un alimentatore compatibile con i dati di input dello speaker. Alimentatore USB non incluso nella confezione.

POWER ON/OFF

Accensione: premere il pulsante di accensione per 3 secondi per accendere lo speaker, quindi la spia Bluetooth si accende. Ora è possibile connettere dispositivi.

Spegnere: premere il pulsante di accensione per 3 secondi per spegnere lo speaker.

CONNETTERE IL DISPOSITIVO

Accendi lo speaker. L'indicatore bluetooth lampeggia in bianco, effettua la ricerca sul tuo dispositivo. Seleziona lo speaker dall'elenco. Emetterà un suono a connessione avvenuta. L'indicatore Bluetooth è bianco fisso. Un solo dispositivo può essere connesso allo speaker. Se desideri collegare un altro dispositivo, disconnettere prima quello corrente e effettuare una nuova connessione.

DISCONNETTERE LO SPEAKER

Quando connesso, premere il pulsante Bluetooth per 3 secondi per disconnettere.

RICONNETTERE LO SPEAKER

Alcuni dispositivi Bluetooth supportano la riconnessione automatica. Alcuni dispositivi si ricollegano automaticamente allo speaker.

Non si ricollega automaticamente ai dispositivi che non supportano la riconnessione automatica. Quando non connesso, premere il pulsante Bluetooth per 3 secondi per riconnettere l'ultimo dispositivo disconnesso.

MODALITA' DI RIPRODUZIONE

Premere brevemente il pulsante Bluetooth per modificare la modalità di riproduzione: BT o AUX, TF.

LUCI RGB

Premere brevemente il pulsante di accensione per controllare lo stato della luce RGB. Riproduci musica: le luci RGB lampeggiano al ritmo della musica. Pausa: la luce RGB cambia lentamente.

RIPRODUZIONE MUSICA CON SCHEDA MICRO SD

Collega una micro SD card e accendi il speaker. Selezionare la modalità di riproduzione.

COLLEGAMENTO CAVO AUDIO

Accendi lo speaker. Collega un cavo audio da 3,5 mm allo speaker e al dispositivo. Lo speaker è ora connesso al tuo dispositivo.

FUNZIONI DEL PULSANTE "PAUSA"

PREMERE BREVEMENTE: 1. Stato di riproduzione della musica: riproduzione, funzione di pausa.

2. Quando in arrivo: rispondere alla chiamata

3. Durante la telefonata: riagganciare

PREMERE A LUNGO: 1. Chiamata in uscita: premere 2 secondi per rifiutare la chiamata

2. Per accedere alla connessione TWS, e una volta connesso, per disconnettere la connessione TWS.

3. Premere per 5 secondi per cancellare le informazioni di associazione e tornare al volume predefinito: lo speaker si spegne automaticamente.

PREMERE 2 VOLTE: Quando connesso via Bluetooth al dispositivo ricompare l'ultima chiamata in uscita.

MODIFICA VOLUME E/O TRACCIA MUSICALE

Durante la riproduzione: Aumentare il volume: Premere brevemente il tasto "+"

Altoparlante il volume: Premere brevemente il tasto "-"

Traccia presente: Premere a lungo sul tasto "+"

Traccia successiva: Premere a lungo sul tasto "+"

FUNZIONALITA' HANDS-FREE

1. Accendere lo speaker, l'indicatore bluetooth lampeggia in bianco

2. Premere brevemente il pulsante di pausa per rispondere alla chiamata dallo speaker tramite cui è possibile parlare attraverso del microfono. Al termine della chiamata continua la riproduzione musicale.

3. Premere a lungo il pulsante di pausa per rifiutare una chiamata in arrivo.

4. L'indicatore Bluetooth è bianco fisso. Può essere connesso solo un dispositivo allo volta.

DISATTIVAZIONE AUTOMATICA DELLA FUNZIONALITA'

Lo speaker si spegne automaticamente entro 10 minuti quando non connesso e non in modalità riproduzione.

SPECIFICHE TECNICHE

• Speaker: Ø52mm 40 6Wx2

• Tempo di ricarica: 3 ore

• Input: 5.0V=1.0A

• Bluetooth: V5.0

• Batteria ricaricabile incorporata: Ioni di Litio, 3.7V - 2200mAh

• Tempo di utilizzo: 6 ore

• Resistenza all'acqua: IPX7

• Range d'utilizzo: circa 10m

• Peso prodotto: 450g

• Dimensioni prodotto: 77x81x191mm

• Banda di frequenza: 2402-2480MHz

• Massimo potenza in trasmissione: -0,80dBm

INCLUSO NEL PACKAGING

• 1pz Speaker Wireless "Ripple Plus" - 1pz Manuale - 1pz cavo USB Type-C

CONNESSIONE TWS

1. Accendere entrambe gli speaker

2. Premere e tenere premuto su uno speaker il pulsante Play/Pausa per circa 2 secondi finché il dispositivo emette un "beep". Tramite questa procedura, per impostazione di default, il dispositivo utilizzato è definito come principale per la connessione.

3. Effettuare la procedura per entrambi i dispositivi. Rilascia il pulsante di play/pausa. Potrebbero essere necessari alcuni secondi prima che i dispositivi si colleghino tra loro. Controllare le spie per distinguere il canale L/R. LED bianco su speaker che lampeggia ogni 3 secondi corrisponde al canale sinistro (speaker principale), la luce bianca fissa ed il canale destro.

4. Accedere al menu Bluetooth su smartphone e accoppiare gli speaker con il tuo telefono selezionando il numero del modello dei dispositivi.

(visualizza solo 1 numero se entrambi combinati in un unico dispositivo).

DISCONNESSIONE TWS

1. Tenere premuto il pulsante di play/pausa su uno degli altoparlanti per circa 2 secondi finché non si sente un "beep".

INFORMAZIONI AGLI UTENTI

Al